



PRO COMP SUSPENSION, Inc. Chula Vista, CA USA

Ph:(619) 216-1444 ● Fax:(619) 216-1474 ● E-Mail: tech@explorerprocomp.com ● Website: www.explorerprocomp.com

INSTALLATION INSTRUCTIONS:


PART# 90-6170 CAM BOLT ASSEMBLY

Part #	Description	Qty.
90-6170	HARDWARE PACK: CAM BOLT	1
42-778T	CAM BOLTS	4
-----	CAM PLATES	8
-----	9/16" PLATED WASHER	8
-----	9/16" PLATED STOVER NUT	4
13-30330	9/16" HARDENED FLAT WASHER	8

Instructions:

1. Install new eccentric cam bolt kit (90-6170). The cam bolts are installed with the heads facing inward. To make the installation and alignment easier, install the alignment cams in the outward most position. It is much easier to let the suspension move in than to pry the suspension outward. Torque the cam bolts to 75 ft./lbs.

NOTE: It is recommended that you replace the cam bolts with every alignment.

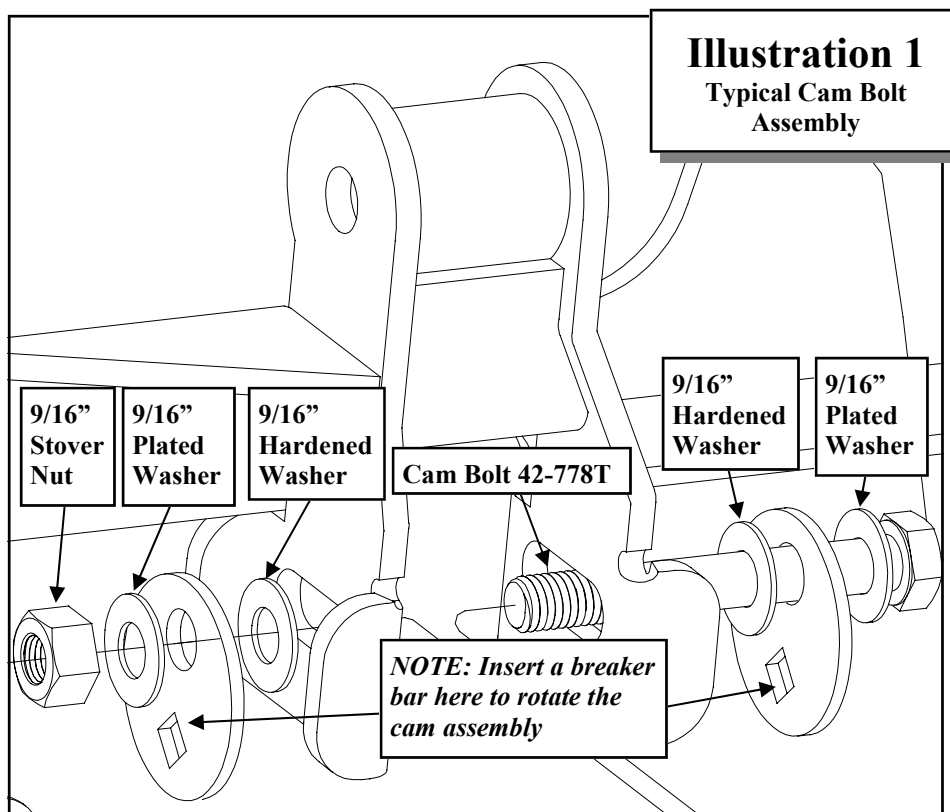

IMPORTANT: Take the vehicle to be aligned at a professional alignment shop only! Do not assume that this setting is "close enough" and skip the alignment.